


Thanks for you choosing this product, it will give you facilitates and pleasures in your life.

This is a wall-mounted hair dryer, designed base on safe Convenient and save-engine with fashion figure. Incarnate the science combine with aesthetics smoothly. It's a good product for hotel and family use, can dry hair and skin.

Characteristics of the product

1. With the power switch, the hair dryer without current when you don't operate it.
2. High-low heats and winds setting for choice.
3. With spring button on the handle, it works when you hand the handle and touch the spring button. It doesn't work when you don't touch it.

The parts of the product

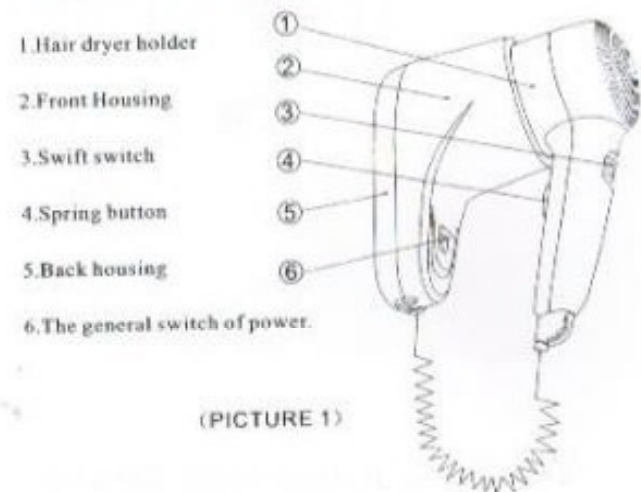


How to install

Cautions: Don't install the hair dryer in bathroom and other Places easy wet.

Opening ways to install


1. Please bore two holes with 6mm's diameter according the picture 2.
2. Put the toggle inside the holes and tighten one screw to the toggle(up), tighten the other screw through the pothook and install it on the wall completely.

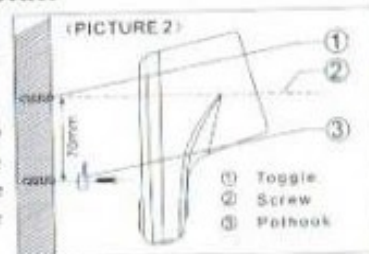

3. Insert the pins in electrical outlet. Turn on the switch that's ok.

Closing ways to install


1. According the progress of above opening ways to install.
2. Please loosen the screw from the front housing part then remove the front housing, eliminate the power cord. (Reference PICTURE 3)
3. Broke the plastic from the wire-in hole, let the cord which was ready by you go through the hole then connect the port to the port which was detached in point 2 (pay attention on the wire's direction about N and L). Please place it on the same place after you connected.
4. If everything is ok, please load the front housing again and tighten the screw.
5. Use the screws to root the hair dryer on the wall.
6. Insert the Pins in electrical outlet. turn on the switch, that's ok.

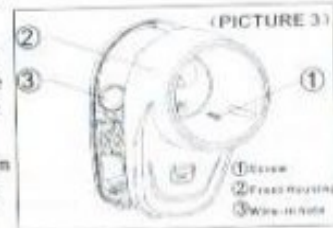

How to use

Turn the general switch of power on, the hair dryer works when you hand the hair dryer and touch the spring button. You can adjust the shift switch to choose the air speed and heat you want. Max as high Min as low

Circuit Diagram

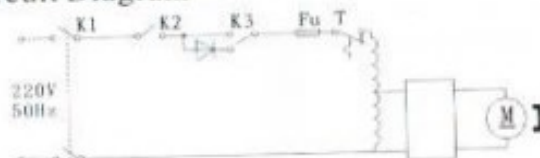

Technological parameters

Voltage: 220V~50Hz

Power: 1000W MAX 450W MIN

Cautions

1. Ensure the voltage of hair dryer is same with the power supply.
2. please follow the below safety frameworks when you operate the hair dryer. Don't operate the hair dryer when your hands are wet. Don't pull out the combined cord. Don't let the man who don't know how to operate the hair dryer operate the hair dryer alone except monitored by man.
3. Clean and keep hair dryer

Please pull out the power plug from electrical outlet when you cleaning the hair dryer. Please pay attention the hair to avoid absorbing in the inlet of hair dryer. Please use the cleaning solution which the water with soap to clean the housing of hair dryer, don't use spray liquid or abrasive. We don't responsible for any danger things if you don't follow the above instructions.

Parts in the package

One set hair dryer One Manual

Accessories: One pothook. 2 piece of screws.
2 piece of toggles.



Wall-Mounted Hair Dryer