Floor scale KERN BFN



Stainless steel weighing bridge with screwed-on weighing plate (IP68) and stainless steel display device (IP65), with EC type approval [M]

Features

- Tough industry standard suitable for use in harsh industrial applications
- Weighing plate screwed on from the top with stainless steel screws, so it's easy to remove, hygienic and easy to clean
- Weighing bridge: stainless steel, extremely resistant to bending due to material thickness, 4 welded stainless steel load cells, dust and spray protection IP68. Weighing bridge can also be delivered as component without the display device, for details see KERN KFD-V40.
- Your support in a HACCP-compliant quality system
- Easy levelling of the weighing bridge as well as access to the junction box from above
- Display device: Stainless steel, protection against dust and water splashes IP65, for industrial applications, hygienic and easy to clean, integrated power supply. The display device can also be delivered as a component without the weighing bridge, for details see KERN KFN-TM
- Benchtop stand incl. wall mount for display device as standard

- Thanks to the RS 232, RS 485 and Bluetooth (optional) interfaces, the balance can easily be connected to existing networks. Data exchange between the balance and PC or printer is also made easier
- Totalising of weights and piece counts
- Internal rechargeable battery pack included with delivery
- Did you know? Our floor scales are delivered in a robust wooden box. This protects the high-quality weighing technology from environmental influences and stresses during transportation. KERN – always one step ahead

Technical data

- Large backlit LCD display, digit height 52 mm
- Dimensions of display device W×D×H
- 266×165×96 mm
- Cable length of display device approx. 5 m
 Weighing plate dimensions W×D×H
- ▲ 1000×1000×90 mm, 1500×1250×95 mm
- Permissible ambient temperature -10 $^{\circ}\text{C}/40$ $^{\circ}\text{C}$









Accessories

- Stand to elevate display device, height of stand approx. 800 mm, KERN YKP-02
- Pair of base plates to fix the weighing bridge to the floor, KERN BFN-A03
- Ascending ramp, stainless steel, not included, for models with weighing plate size
 KERN BFN-A05
- KERN BFN-A01
- Is Stable pit frame, Stainless Steel, for models with weighing plate size
 KERN BFN-A06
- B KERN BFN-A02
- Internal rechargeable battery pack, operating time up to 35 h without backlight, charging time approx. 12 h, KERN GAB-A04
- RS 232 data interface including interface cable 1,5 m, must be ordered at purchase, KERN KFN-A01
- Cable with special length 15 m, between display device and platform, for verified models which must be ordered at the time of purchase, KERN BFB-A03
- Further details, plenty of further accessories and suitable printers see Accessories

Note: For verified scales the weighing bridge must be fixed to the floor. Optionally, with an access ramp, a footplate pair or a pit frame

Shipment via freight forwarder. Please ask for dimensions, gross weight, shipping costs

STANDARD									OPTION	FACTORY				
	Ţ	KCP			-√+ ⊙ 🤊 ୬	^	666	666					DAkkS	••••• M
CAL EXT	ET	PROTOCOL	PCS	SUM	TOL	MOVE	IP 65	IP 68	ACCU	MULTI	DMS	2 DAYS	+3 DAYS	RS 232 +3 DAYS
							2	1						

Model	Weighing	Readability	Readability Minimal load		Weighing plate		Option					
	capacity	= Verification value					Verification		DAkkS Calibr. Certificate			
	[Max]	[d] = [e]	[Min]	approx.			MU		DAkkS			
KERN	kg	kg	kg	kg			KERN		KERN			
BFN 600K-1SM	600	0,2	4	100	А		965-230		963-130			
BFN 1T-4SM	1500	0,5	10	100	Α		965-230		963-130			
BFN 1.5T0.5M	1500	0,5	10	145	В		965-230		963-130			
BFN 3T-3M	3000	1	20	150	В		On requ	iest	963-132			
Note: For applications that require verification, please order verification at the same time, initial verification at a later date is not possible.												
Verification at the factory, we need to know the full address of the location of use.												

KERN & SOHN GmbH · Ziegelei 1 · 72336 Balingen · Germany · Tel. +49 7433 9933-0 · www.kern-sohn.com · info@kern-sohn.com

KERN BALANCES & TEST SERVICES CATALOGUE 2021

KCP

PROTOCOL

GLP

INTERN

PRINTER

PCS

RECIPE

RECIPE

- 88'

SUM

PERCENT

C

UNIT

- → +<

TOL

^-

digital systems GLP/ISO log:

connection GLP/ISO log:

printers

Piece counting:

Recipe level A:

Recipe level B:

Totalising level A:

value (100 %)

Weighing units:

Hold function:

KERN Communication Protocol (KCP):

It is a standardized interface command set for

KERN balances and other instruments, which

devices featuring KCP are thus easily integrated

with computers, industrial controllers and other

The balance displays serial number, user ID,

With weight, date and time. Only with KERN

Reference quantities selectable. Display can

The weights of the recipe ingredients can

be added together and the total weight of

Internal memory for complete recipes with

The weights of similar items can be added

Determining the deviation in % from the target

Can be switched to e.g. nonmetric units at the

(Checkweighing) Upper and lower limiting can

be programmed individually, e.g. for sorting and

dosing. The process is supported by an audible

(Animal weighing program) When the weighing

conditions are unstable, a stable weight is calculated as an average value

or visual signal, see the relevant model

touch of a key. See balance model. Please refer

together and the total can be printed out

name and target value of the recipe ingredients.

be switched from piece to weight

the recipe can be printed out

User guidance through display

Percentage determination:

to KERN's website for more details

Weighing with tolerance range:

weight, date and time, regardless of a printer

allows retrieving and controlling all relevant parameters and functions of the device. KERN



Pictograms



Internal adjusting: Quick setting up of the balance's accuracy with



Adjusting program CAL:

For quick setting up of the balance's accuracy. External adjusting weight required

internal adjusting weight (motordriven)



Easy Touch: Suitable for the connection, data transmission and control through PC, tablet or smartphone.



Memory:

Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.



Alibi memory:

Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard

Data interface RS-232:

• 6550.• To connect the balance to a printer, PC or RS 232 network



RS-485 data interface:

To connect the balance to a printer, PC or other peripherals. Suitable for data transfer over large distances. Network in bus topology is possible



USB data interface:

To connect the balance to a printer, PC or other peripherals

Bluetooth* data interface:

To transfer data from the balance to a printer, PC or other peripherals



*

WiFi data interface:

To transfer data from the balance to a printer, PC or other peripherals



Control outputs (optocoupler, digital I/O): To connect relays, signal lamps, valves, etc.



Analogue interface:

to connect a suitable peripheral device for analogue processing of the measurements



Interface for second balance:

For direct connection of a second balance



Network interface:

For connecting the scale to an Ethernet network






water splashes IPxx: The type of protection is shown in the pictogram

Protection against dust and

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KERN & SOHN GmbH is under license. Other trademarks and trade names are those of their respective owners

UNDER the balance

Ę.

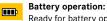



Ready for battery operation. The battery type

Suspended weighing:



is specified for each device

Load support with hook on the underside of



Rechargeable battery pack: Rechargeable set

Universal mains adapter:

with universal input and optional input socket MULTI adapters for A) EU, CH, GB; B) EU, CH, GB, USA; C) EU, CH, GB, USA, AUS



Mains adapter:

230V/50Hz in standard version for EU, CH. On request GB, USA or AUS version available

Power supply:



Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request



Weighing principle: Strain gauges:

Electrical resistor on an elastic deforming body



Weighing principle: Tuning fork:

A resonating body is electromagnetically excited, causing it to oscillate



Weighing principle: Electromagnetic force compensation:

Coil inside a permanent magnet. For the most accurate weighings



Weighing principle: Single cell technology:



Advanced version of the force compensation principle with the highest level of precision



The time required for verification is specified +3 DAYS in the pictogram

DAkkS calibration possible (DKD): DAkkS The time required for DAkkS calibration is +3 DAYS shown in days in the pictogram

Factory calibration (ISO):



The time required for Factory calibration is shown in days in the pictogram



Package shipment:



The time required for internal shipping preparations is shown in days in the pictogram

Pallet shipment:



Your KERN specialist dealer:

The time required for internal shipping preparations is shown in days in the pictogram

KERN – Precision is our business

To ensure the high precision of your balance KERN offers you the the appropriate test weight in the international OIML error limit classes E1-M3 from 1 mg - 2500 kg. In combination with a DAkkS calibration certificate the best pre-requisite for proper balance calibration.

The KERN DAkkS calibration laboratory today is one of the most modern and bestequipped DAkkS calibration laboratories for balances, test weights and force-measurement in Europe

Thanks to the high level of automation, we can carry out DAkkS calibration of balances, test weights and force-measuring devices 24 hours a day, 7 days a week.

Range of services:

- · DAkkS calibration of balances with a maximum load of up to 50 t
- · DAkkS calibration of weights in the range of 1 mg 2500 kg · Volume determination and measuring of magnetic susceptibility (magnetic
- characteristics) for test weights · Database supported management of checking equipment and reminder service
- · Calibration of force-measuring devices
- · DAkkS calibration certificates in the following languages DE, EN, FR, IT, ES, NL, PL
- · Conformity evaluation and reverification of balances and test weights