

**MEDISTEEL**

**Single roll toilet tissue dispenser / Surface mounted**



**AI0113C**  
Bright finish



**AI0113CS**  
Satin finish

## General Description

- Surface Mounted single roll toilet tissue dispenser, bright or satin finished, made in stainless steel AISI 304.
- The stainless steel AISI 304 construction protects the product against rust and ensures quality and longevity.
- Chrome-plated plastic spindle holds rolls up to 130 mm diameter.
- Model suitable for the hotel sector, elderly centers, homes and for collectivities.


## Components & materials

- **AI0113C:** AISI 304 stainless steel, bright finish.
- **AI0113CS:** AISI 304 stainless steel, satin finish.
- **FLANGE AND POST:** 2 units made in stainless steel AISI 304, 0.8 mm thick. Each flange has a concealed 1.6 mm stainless steel mounting bracket. All-welded construction. A stainless steel lock screw, at the bottom perimeter of flange, is used to lock the unit to the wall mounting plate. The mounting plate is secured to wall with two provided stainless steel screws.
- **SPINDLE:** made in Chrome-plated plastic and equipped with an inner heavy-duty spring.
- Screws and plugs for installation to the wall are provided.

## Technical Specifications

<b>General dimensions</b>	130 x 75 x 80
<b>Flange and support arm thickness</b>	0.8 mm
<b>Wall plate thickness</b>	1.6 mm
<b>Toilet paper roll</b>	Max. Ø130 mm

## Dimensions

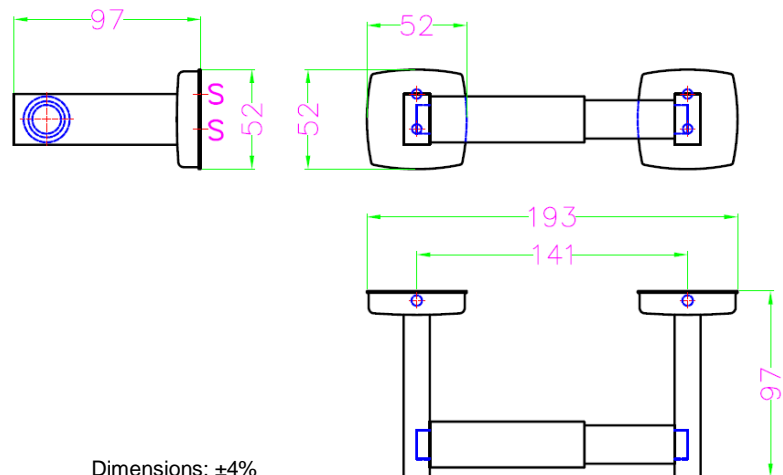

## MOUNTING

Fix the wall mounting plates on the wall using the provided screws through the mounting plate holes (points indicated by an "S" in the upper figure).

Hang post and flange assembly on mounting plate and tighten the lock screw to lock unit to plate.

